



# Getting to Know Your 2008 G8



## Table of Contents

### DRIVER INFORMATION

Instrument Panel	2
Instrument Panel Cluster	3
Driver Information Center	4

### SAFETY & SECURITY

Remote Keyless Entry	5
Door Locks	6
OnStar®	6
Passenger Airbag Status Indicator	6

### COMFORT

Power Seat Adjustments	7
Steering Wheel Adjustment	7
Heated Seats	8
Manual Climate Controls	8
Automatic Dual Zone Climate Controls	8

### ENTERTAINMENT

Audio System Features	10
Multiple-Disc CD Player	11
Audio Steering Wheel Controls	12

### CONVENIENCE

Remote Vehicle Start	13
Accessory Power Outlets	14
Automatic Headlamp System/ Exterior Lamps	14
Interior Lamps	14
Sunroof	15
Windshield Wipers and Washer	15
Cruise Control	16
Turn and Lane Change Signals	16

Power Windows and Mirrors	16
Rear Seat Pass-Through	17

### PERFORMANCE & MAINTENANCE

Sport Shift Mode and Driver Shift Control	17
Tire Pressure Monitor	18
StabiliTrak® – Stability Control System	18
Spare Tire/Inflator Kit	19
Battery Location	19
Resetting the Oil Life System	19
Refueling the Vehicle	19
Winter Tires	19

 
### OWNER INFORMATION

Roadside Assistance	20
My GMLink	20

Congratulations on your purchase of a Pontiac G8. Please read this information about your vehicle's features and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Keep this booklet with your Owner Manual for easy reference.

## DRIVER INFORMATION

## Instrument Panel

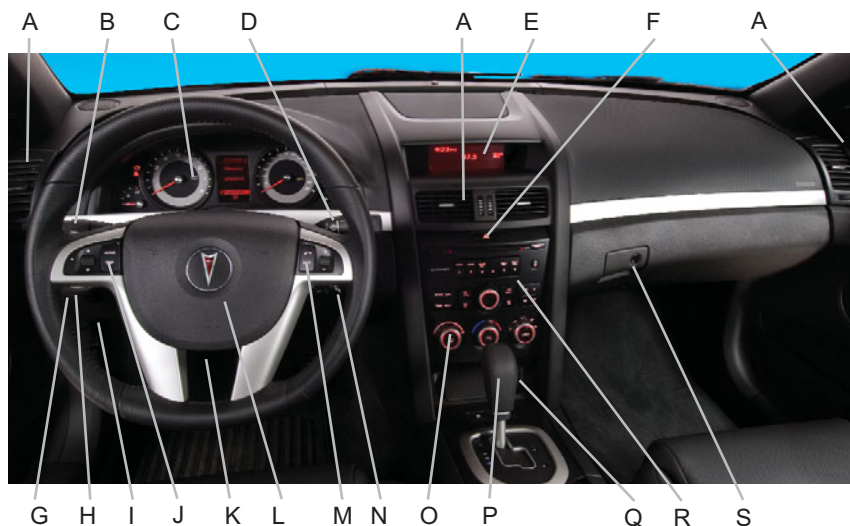


The main features of the instrument panel include:

- A. Air Outlets
- B. Turn Signal/Cruise Control/Multifunction Lever
- C. Instrument Panel Cluster
- D. Windshield Wipers Lever
- E. Infotainment Screen/Sports Gauges (if equipped)
- F. Hazard Warning Flashers Button
- G. Exterior Lamps Control
- H. Instrument Panel Brightness Control
- I. Hood Release
- J. DIC Controls/Audio Steering Wheel Controls
- K. Tilt Steering Wheel Lever
- L. Horn
- M. Audio Steering Wheel Controls
- N. Ignition Switch
- O. Climate Controls
- P. Shift Lever
- Q. Accessory Power Outlet
- R. Audio System
- S. Locking Glove Box

*See Instruments and Controls in your Owner Manual.*

## Instrument Panel Cluster

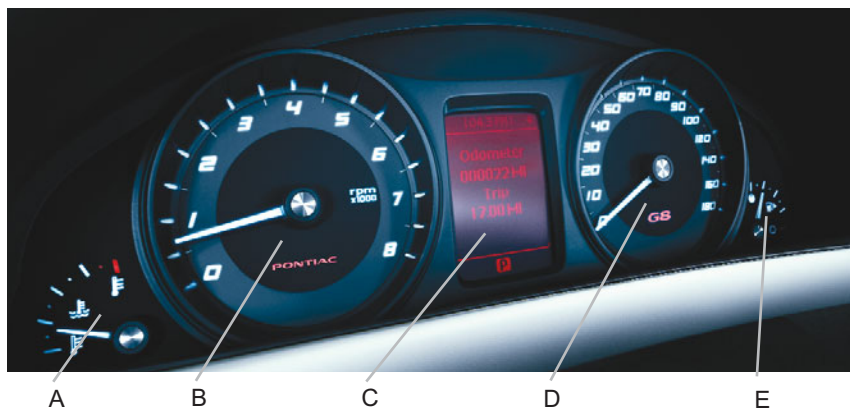 


Your vehicle's instrument panel cluster is designed to let you know at a glance how your vehicle is running. It includes these key features:

- A. Engine Coolant Temperature Gauge
- B. Tachometer
- C. Driver Information Center
- D. Speedometer
- E. Fuel Gauge

**Note:** The instrument panel cluster is designed to let you know about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with the information being relayed to you by the lights, gauges and indicators, as well as what action can be taken to ensure safety and to prevent damage.

*See Instruments and Controls in your Owner Manual.*

## Driver Information Center

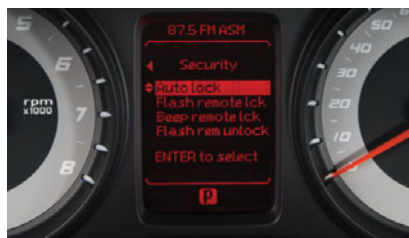 

The Driver Information Center (DIC) on the instrument panel cluster displays a number of vehicle functions, including the trip computer, vehicle feature customization, audio information and vehicle warning messages.



## DIC Controls

DIC functions and menus can be accessed using the following controls located on the left side of the steering wheel:

**↶ (Trip):** Press this button to scroll through the trip computer displays and vehicle customization menu, and to acknowledge a warning message.

**↵ (Enter):** Quickly press and release this switch to reset all screens. Press and hold this switch for more than three seconds to reset **only the current screen**. A chime will sound when the reset is complete.

## Trip Computer

Press the ↶ (Trip) button to scroll through the trip computer displays, including:

- Odometer/trip odometer
- Fuel range
- Average speed/average fuel economy
- Overspeed warning
- Units — English/Metric
- Digital Speedometer
- Tire pressure monitoring

When scrolling through the displays, the values are highlighted for a short period before the highlighting disappears. The values cannot be reset unless they are highlighted.

## Vehicle Feature Customization

The customization menu is available only when the vehicle speed is below 6 mph. To navigate the customization menu:

1. Press and release the ↶ (Trip) button until Customization is displayed; then press the ↵ (Enter) switch to enter the customization menu.
2. Rotate the ↵ switch with your thumb to scroll through the menu and the entries within a menu.
3. Press the ↵ switch to select a menu or menu entry.
4. To exit a menu, scroll to the ◀ symbol at the top-left corner of the display and press the ↵ switch.
5. To exit the customization menu, scroll to Exit and press the ↵ switch, or press the ↶ button.

Customization menu entries include:

- Reset settings (reset all settings to the factory defaults)


- Security
  - Auto unlock
  - Auto lock
  - Flash remote lock
  - Beep remote lock
  - Flash remote unlock
  - Two stage unlock
  - Remote start
- Lighting
  - Approach lighting
  - Egress lighting
- Trip Computer (see Trip Computer earlier in this section)
- Language (English or French)

When scrolling through the menu, help screens are available to help you understand the features.

- To view a help screen, select a feature and wait a few seconds for the help screen to pop up.

### Warnings and Messages

The DIC provides a variety of vehicle warning messages (depending on optional equipment) if a problem is sensed in a vehicle system.

- To acknowledge a message and clear it from the display, press the  button on the steering wheel. Some urgent messages cannot be cleared from the DIC display.

If you have a current OnStar subscription, and a warning message appears, you can press the OnStar button and speak to an OnStar Advisor. In many vehicles, OnStar Advisors can access certain diagnostic information and can tell you how serious the problem is and what you should do about it.

**Note:** Your vehicle's warnings and messages provide critical information that can prevent damage to your vehicle. Review your Owner Manual to become familiar with the information displayed and the action required.

See *Instruments and Controls in your Owner Manual.*

## SAFETY & SECURITY


### Remote Keyless Entry


The functions of the Remote Keyless Entry (RKE) transmitter include:

#### (Unlock):

Press this button to unlock the driver's door only or all doors.

The unlock function can be customized using the Driver Information Center.


 (Lock): Press this button to lock all the doors.

 (Trunk): Press this button to unlatch the trunk.

The trunk also can be unlatched by pressing the trunk release button located in the glove box.



**Note:** An emergency trunk release handle is located just inside the rear seat pass-through, which can be used to unlatch the trunk in case of battery failure.

 (Remote Start): Press this button to start the engine. (See Remote Vehicle Start.)

**🔑 (Vehicle Locator/Panic Alarm):**

Press and release this red button to locate the vehicle. The exterior lamps will flash and the horn will sound.

Press and hold the button to activate the panic alarm. The turn signals will flash and the horn will sound. To cancel the alarm, press the button again or turn the ignition key to the On position.

**Keys**

One RKE transmitter features a folding key and the other transmitter has a fixed blade key. There also is a glove box key.

- To extend the folding key, press the round button on the RKE transmitter.
- To retract the folding key, press the round button and fold the key into the RKE transmitter.

See *Keys, Doors and Windows in your Owner Manual.*

**Door Locks**

To lock/unlock the vehicle without the Remote Keyless Entry transmitter:

- Press the power door lock or unlock button located on the center console. The driver's door will not lock if the door is open.
- Insert the key in the driver's door, and turn it toward the rear of the vehicle to lock all doors; turn it once toward the front of the vehicle to unlock the driver's door, or turn it twice toward the front of the vehicle to unlock all doors.
- **The fuel door will not open if the driver's door is locked.**



See *Keys, Doors and Windows in your Owner Manual.*

**OnStar®**

Your vehicle may feature the OnStar Safe & Sound Plan or the uplevel OnStar Directions & Connections Plan, with one year of OnStar service from the date you purchased your new vehicle. OnStar offers a variety of capabilities, such as Remote Door Unlock, Automatic Notification of Airbag Deployment, and Hands-Free Calling. In addition, most vehicles can get driving directions using Turn-by-Turn Navigation. Press the OnStar button to ask an OnStar Advisor about the service plan you have or to upgrade your plan.

For more information, refer to your OnStar Owner's Guide, call 1-888-4ONSTAR (1-888-466-7827), or visit [onstar.com](http://onstar.com).

See *Instruments and Controls in your Owner Manual.*

**Passenger Airbag Status Indicator**

Your vehicle is equipped with a Passenger Sensing System located in the front passenger seat for the front passenger airbag. There also is a front passenger airbag status indicator located on the inside rearview mirror.

**Note:** It is recommended that children not be placed in the front passenger seat, even with the Passenger Sensing System. All children should be properly secured in a rear seat.

Aftermarket seat covers should not be used. They may interfere with the airbag sensors and will void the warranty.

See *Seats and Restraints in your Owner Manual.*

## COMFORT

### Power Seat Adjustments



#### 4-Way Power Seat Adjustment

The power seat switch is located on the outboard side of each front seat.

- To move a front seat forward or rearward, lift the bar under the front of the seat and slide the seat to the desired position; then release the bar.
- To adjust the height of a front seat, move the switch up or down.
- To tilt the position of a front seat, move the switch in the desired direction.

#### 6-Way Power Seat Adjustment (if equipped)

The power seat switch is located on the outboard side of each front seat.

- To move a front seat forward or rearward, move the switch forward or rearward.
- To adjust the height of a front seat, move the switch up or down.
- To tilt the position of a front seat, move the switch in the desired direction.

#### Seatback and Lumbar Adjustment

The recline knob and lumbar adjustment knob are located on the outboard side of the seatback.

- To adjust the driver's seatback, turn the larger lower knob (A). For ease of use, lean forward while adjusting the seatback forward.



- To adjust the amount of lumbar support, turn the smaller upper knob (B).

See *Seats and Restraints* in your Owner Manual.

### Steering Wheel Adjustment

Adjust the driver's seat to a comfortable position before adjusting the steering wheel.



To tilt and telescope the position of the steering wheel:


1. Push down the lever under the steering column.
2. Adjust the wheel to a comfortable position by moving it up or down as well as in or out.
3. Pull up the lever to lock the wheel in place.

See *Instruments and Controls* in your Owner Manual.

### Heated Seats (if equipped)



 
The heated seat buttons are located at the front of the center console.

- Press the  (Heated Seat) button to activate the Low heat setting (one indicator lamp).


Continue to press the button to cycle through the temperature settings of Medium (two indicator lights), High (three indicator lights) and Off (no indicator lights).

See *Seats and Restraints in your Owner Manual*.

### Manual Climate Controls

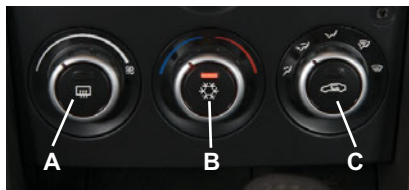



The manual climate control system includes the following controls:


 **(Fan):** Turn the fan control knob (A) to increase or decrease the fan speed. There may be a slight delay when selecting the highest fan speed. Turn the knob fully counterclockwise to turn off the fan.

**Temperature Control:** Turn the temperature control knob (B) to increase or decrease the temperature setting.

**Air Delivery Mode:** Turn the mode control knob (C) to change the direction of the air delivery to the vent, bi-level, floor, defog/floor or defrost mode.

 **(Recirculation):** Press this button on the air delivery mode knob to recirculate air inside the vehicle. This mode helps heat or cool the vehicle more quickly and prevents outside air and odors from entering the vehicle. Recirculation cannot be activated if the defrost mode is selected.

 **(Air Conditioning):** Press this button on the temperature control knob to turn the air conditioning system on or off.

 **(Rear Window Defogger):** Press this button on the fan control knob to turn the rear window defogger on or off. The defogger will turn off automatically after a set period of time.

See *Climate Controls in your Owner Manual*.

### Automatic Dual Zone Climate Controls (if equipped)

The automatic dual zone climate control system maintains the desired individual temperature for the driver and front seat passenger. The system automatically adjusts the air delivery mode, fan speed, air conditioning and recirculation functions to reach the set temperature(s) as quickly as possible.



## Automatic Operation

To set the automatic system:

1. Press the AUTO button.
2. Use the temperature controls to adjust the temperature. Allow time for the system to reach the desired temperature.



## Manual Operation

To operate the system manually, use the following controls:

**On/Off:** Press this button to turn the system on or off. When the system is off, pressing any button will turn it on.

**AUTO:** Press this button to switch the system to automatic operation.

**ZONE:** Press this button to operate the system in the single-zone (SZ) mode or the dual-zone (DZ) mode. The single-zone mode sets one temperature for the vehicle. The dual-zone mode allows two different temperatures to be set.

**Temperature Control:** Turn the left temperature control knob to set the driver's temperature setting and the right temperature control knob to set the front passenger's temperature setting.

**Air Delivery Mode:** Press the up or down mode button to change the direction of the air delivery to the vent, bi-level, floor or defog/floor mode.

**Fan Speed:** Press the + or – button to increase or decrease fan speed.

**(Air Conditioning):** Press this button to turn the air conditioning on or off.

**(Recirculation):** Press this button to recirculate air inside the vehicle. This mode helps heat or cool the vehicle more quickly and prevents outside air and odors from entering the vehicle.

Press and hold this button for four seconds to activate the pollution mode, which will enable the system to automatically select recirculation when vehicle speed is less than 9 mph. This helps prevent exhaust fumes from entering the vehicle in heavy traffic.

**(Defrost):** Press this button to turn the windshield defrost mode on or off. Defrost mode must be selected manually when needed, even with the system operating in the Auto mode. Recirculation cannot be activated if the defrost mode is selected.

 
**EXT TEMP (Exterior Temperature):** Press this button to view the outside temperature.

**(Rear Window Defogger):** Press this button to turn the rear window defogger on or off. The defogger will turn off automatically after a set period of time.

See *Climate Controls* in your Owner Manual.

## ENTERTAINMENT

## Audio System Features



While most of the features on the single-disc audio system or multiple-disc CD player (if equipped) will look familiar, some of the following may be new:

**⏻ (Power):** Press this button to turn the system on or off. The system also can be turned on by pressing the BAND, CD or AUX button, or the SRCE (Source) steering wheel control.

**◀ (Volume):** Turn the center knob (single-disc CD system) or the left knob (multiple-disc CD player) to adjust the volume.

**<< >> (Tune):** Press these buttons to manually select a radio station.

**<< >> (Seek):** Press these buttons to seek a radio station or, when playing a CD, to go to the previous/next track.

**BAND:** Press this button to switch between FM1, FM2 and AM. When playing a CD, press this button to switch to the radio.

**ASM (Automatic Station Memory):**

Press and hold this button to automatically store the six stations with the strongest signal on the selected band (FM or AM). Once stored, press this button to switch between ASM stations and regular preset stations.

**⌚ (Time):** Press this button to display the clock and calendar.

**CD:** Press this button to switch to CD operation.

**|| (CD Pause):** Press this button to pause CD operation.

**AUX (Auxiliary):** Press this button to switch to operation of an auxiliary device, such as a portable audio player, connected to the auxiliary input jack located on the radio.

**Note:** Engaging in extended searching for specific audio stations or songs by using buttons and knobs — or giving extended attention to entertainment tasks — can lead you to look away from the road frequently or for prolonged periods, which may cause you to miss seeing things on the road that you need to see. Avoid engaging in extended searching for specific items while driving.

**Setting the Clock and Calendar**

To adjust the clock and calendar:

1. Press and hold the ⌚ (Time) button for more than two seconds.
2. Press the volume knob (single-disc CD system) or the right MENU knob (multiple-disc CD player) to select the hours, minutes, date, month or year. The selected item will flash or be highlighted.

- Turn the volume knob or right MENU knob to adjust the selected item.
- To exit, press the ⌚ (Time) button.

### Setting Preset Stations (Single-disc CD System)

To store preset stations:

- Press the BAND button to select the desired radio band.
- Tune in the desired radio station.
- Press and hold one of the six numbered buttons until the preset number is displayed and a beep sounds to store the station.
- Repeat the steps for each numbered button on each band, if desired.

To store preset stations on the multiple-disc CD player, refer to the Multiple-Disc CD Player section.

### Audio Settings

Audio settings, such as tone and speaker control, are included in the Option menu. To adjust settings:

- Press the volume knob (single-disc CD system) or the right MENU knob (multiple-disc CD player) to enter the Option menu.
- Turn the volume knob or right MENU knob to select a menu item; then press the knob to access the menu item.
- Turn the volume knob or right MENU knob to select a setting; then press the knob to access the setting.
- Turn the volume knob or right MENU knob to adjust a setting; then press the knob to store it.
- To exit, select the Back option or wait eight seconds.

### Help Menu

The help menu provides information about the radio buttons and functions. To display the help menu information:

- Press the ? (Help Menu) button.
- Turn the volume knob (single-disc CD system) or the right MENU knob (multiple-disc CD player) to select the desired Help menu; then press the knob to access the menu.
- To go back one level, select Back or Exit and press the Volume knob or right MENU knob.

See *Infotainment in your Owner Manual*.

### Multiple-Disc CD Player (if equipped)



In addition to the controls and settings highlighted in the Audio System Features section, the multiple-disc CD player has several unique features.

### Setting Preset Stations




To store preset stations:

- Press the BAND button to select the desired radio band.
- Tune in the desired radio station.

3. Press and hold one of the six soft keys below the display screen until the preset number is displayed and a beep sounds to store the station.
4. Repeat the steps for each soft key on each band, if desired.



### CD Changer Operation

To load a CD(s):

1. Press the LOAD  button to load one CD, or press and hold the LOAD  button to load multiple CDs.
2. Follow the display prompts to load each CD.
3. Press the  EJECT button or wait 10 seconds to cancel loading CDs.



**Note:** CDs with any affixed labels may jam in the CD player. Label a CD using a permanent marker. If more than one CD is inserted into the slot at a time, or if scratched or damaged CDs are played, the CD player could be damaged. When using the CD player, use only CDs in good condition without labels; load one CD at a time; and keep the CD player and the loading slot free of foreign materials, liquids or debris.

To play a specific CD:

- Press the CD button to play the current CD.
- Press the  (Disc) buttons to select a CD.
- Press the  (Track) buttons to go to the previous/next track of the current CD.

To eject a CD(s):

- Press the  EJECT button to eject the currently selected CD.

- Press the  EJECT button, and then press the soft key of the desired CD to eject a specific CD.
- Press and hold the  EJECT button to eject all CDs.


If a CD is not removed after several seconds, it will be pulled back into the player automatically.


See *Infotainment* in your *Owner Manual*.

### Audio Steering Wheel Controls (if equipped)




The following audio controls are located on the steering wheel:

 **(Volume):** Rotate the switch on the right side of the steering wheel up (+) or down (-) to adjust the volume.

 **(Mute):** Press the switch on the right side of the steering wheel to mute the vehicle speakers.

**SRCE (Source):** Press this button to switch between FM1, FM2, AM, CD or an AUX device (if equipped).

 **(Next/Previous):** Rotate the switch on the left side of the steering wheel to go to the next/previous preset radio station or, when playing a CD, to the next/previous track.

Press the switch to go to the next CD in the multiple-disc CD player (if equipped).

See *Infotainment in your Owner Manual*.

## CONVENIENCE

### Remote Vehicle Start



This feature allows you to start the engine from outside the vehicle by using the Remote Keyless Entry (RKE) transmitter. The remote start capability must be turned on using the Driver Information Center.

During a remote start, the manual climate control system will not operate until the key is turned on. The automatic climate control system (if equipped) will default to a set temperature of 73°F (23°C), regardless of the system setting prior to turning off the vehicle.

Once the key is turned on, both systems will operate at the last setting before the vehicle was turned off.

### Starting the Vehicle

To remote-start the vehicle:


1. Aim the RKE transmitter at the vehicle. (Transmitter range is within approximately 164 feet of the vehicle.)
2. Press and release the  (Lock) button on the transmitter.
3. Immediately press and hold the  (Remote Start) button for about four seconds. When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes.
4. Repeat these steps for a 10-minute time extension. Only two consecutive remote starts are allowed.

When you enter the vehicle after a remote start, the ignition must be turned to the On position before driving.

**Note:** The Remote Vehicle Start feature will not operate if the key is in the ignition, the hood is open, or the Check Engine light is illuminated on the instrument panel cluster.

### Canceling a Remote Start

If you wish to turn off the engine instead of driving after a remote start:

- Press and hold the  (Remote Start) button until the parking lamps turn off.
- Press and release the Hazard Warning Flashers button. Press it again to turn off the flashers.
- Turn the key in the ignition switch to the On position and then off.

See *Keys, Doors and Windows in your Owner Manual*.

## Accessory Power Outlets

Accessory power outlets are located at the front of the center console and inside the center console storage area.

See *Instruments and Controls in your Owner Manual*.

## Automatic Headlamp System/ Exterior Lamps

The Automatic Headlamp System turns on the Daytime Running Lamps in the daytime and the headlamps and other exterior lamps at night or when necessary. The system uses a light sensor, located on top of the instrument panel, to determine light conditions. For proper operation, avoid placing any objects on or near the sensor.

### Exterior Lamps Control



The exterior lamps control switch, located on the left side of the instrument panel, can be rotated to the following positions:

○ **(Off)**: This position turns off the Automatic Headlamps or the manually activated headlamps and parking lamps.

### **AUTO (Automatic Headlamps):**

This position enables the Automatic Headlamp System.

☞☞ **(Parking Lamps)**: This position turns on the parking lamps and taillamps.

☞☞☞ **(Headlamps)**: This position turns on the headlamps, parking lamps and taillamps.

☞☞☞☞ **(Fog Lamps)**: Pull out the control switch to turn on the fog lamps and push it in to turn off the fog lamps. The fog lamps will not operate when the control switch is in the Off position.

See *Lighting in your Owner Manual*.

## Interior Lamps

### Instrument Panel Brightness

The instrument panel lighting buttons are located above the exterior lamps control switch.



- To adjust the instrument panel lighting, press and hold the + (bright) or – (dim) button.
- To activate the night panel mode, which illuminates only the speedometer, information displays and warning lights, press both the + (bright) and – (dim) buttons. Press both buttons again to turn on the full instrument panel lighting.

## Dome Lamps

The dome lamp controls are located on the front dome lamp.



- To turn the front and rear dome lamps on or off while the doors are closed, press the ☰ (On/Off) button.
- To have the dome lamps turn on automatically when a door is open, press the 🚪 (Door Activated) button.

See *Lighting in your Owner Manual.*

## Sunroof (if equipped)

The sunroof control is located on the overhead console.



- To tilt (vent) the sunroof, turn the control counterclockwise to one of the three tilt positions.
- To open the sunroof, turn the control clockwise to one of the six open positions. The sunshade will open with the sunroof.
- To close the sunroof, turn the control to the closed position.

See *Keys, Doors and Windows in your Owner Manual.*

## Windshield Wipers and Washer



The windshield wipers feature an over-size driver-side wiper.

The wipers and washers lever, located on the right side of the steering column, operates in the following positions:

☂️ (**Mist**): Move the lever down from the Off position to turn the wipers on for one wipe.

○ (**Off**): Move the lever to this position to turn off the wipers.

☂️ (**Intermittent**): Move the lever up to the first position to set a delay between wipes. Rotate the ☂️ control band to adjust the delay. The wipers activate more frequently as the band is rotated upward.

**1 (Low)**: Move the lever up to the second position for steady, low-speed wipes.

**2 (High)**: Move the lever up to the third position for rapid, high-speed wipes.

☂️ (**Washer Fluid**): Pull the lever toward you to spray washer fluid on the windshield.

 
See *Instruments and Controls in your Owner Manual.*

## Cruise Control





Cruise control is operated by using the multifunction lever on the left side of the steering column.

To set cruise control:

1. Press the  (On/Off/Cancel) button on the end of the lever to turn on cruise control. Cruise On will appear on the Driver Information Center (DIC).
2. When traveling at the desired speed, rotate the control band on the lever down to the SET – position. Cruise Active will appear on the DIC.

  To adjust or cancel cruise control:

- Rotate the control band down to the SET – position to reduce the set speed or up to the RES + position to increase speed.
- Press the  (On/Off/Cancel) button once or press the brake pedal to cancel cruise control but retain the set speed in memory. Cruise Inactive will appear on the DIC. Rotate the control band up to the RES + position to resume the set speed.
- Press the  (On/Off/Cancel) button twice to turn off cruise control. Cruise Off will appear on the DIC.

Cruise control turns off and the set speed is erased each time the vehicle is turned off.

See *Instruments and Controls in your Owner Manual*.

## Turn and Lane Change Signals

The turn signal/multifunction lever features two upward and two downward positions to signal a turn or a lane change.

- To signal a turn, move the lever all the way up or down.
- To signal a lane change, raise or lower the lever until the arrow on the instrument panel cluster starts to flash, and then release the lever. The turn signal will automatically flash three times.

See *Instruments and Controls in your Owner Manual*.

## Power Windows and Mirrors

The power switches for the windows and outside rearview mirrors are located on the center console.


### Express-Down Front Windows

- To operate the express-down feature, press and hold the desired window switch for approximately one second and the window will lower automatically. To stop the window, pull or press the switch momentarily.
- Press the switch partway to lower the window a small amount.





## Window Lockout

- Press the  (Window Lockout) button (A) to prevent the rear windows from operating except from the center console. Press the button again to turn off the lockout feature.

## Power Mirrors

To adjust the position of an outside power mirror:

1. Move the selector switch (B) to the left or right to select either the left or right outside rearview mirror.
2. Press the four-way control pad (C) to adjust the position of the mirror.
3. Move the selector switch to the center position.

See *Keys, Doors and Windows in your Owner Manual.*

## Rear Seat Pass-Through



The rear seat has a center pass-through section that may be folded forward to gain access to the trunk or for carrying long loads. The back of the pass-through also has two cupholders.

- To fold the pass-through, press the lock button on the top center of the middle seat and pull down the pass-through section.

See *Seats and Restraints in your Owner Manual.*

## PERFORMANCE & MAINTENANCE

### Sport Shift Mode and Driver Shift Control

The automatic transmission features a performance Sport shift mode and a manually shifted Driver Shift Control (DSC) mode.



#### Sport Shift Mode

In the Sport shift mode, the transmission will delay upshifts and allow earlier downshifts to enhance performance.

- To activate Sport shift mode, move the shift lever to the right of the Drive (D) position. Do not move the shift lever up or down to the + or – position; otherwise, Driver Shift Control will be enabled.

The current gear is shown in the Driver Information Center while the transmission is in the Sport shift mode.

#### Driver Shift Control

DSC allows the driver to shift gears similar to a manual transmission. When using this feature, the vehicle can be driven in a sportier manner. DSC also can be used to downshift when driving on a downhill grade to provide engine braking.

To enable DSC, move the shift lever to the right of the Drive (D) position.

- To upshift, tap the lever forward (+).
- To downshift, tap the lever rearward (–).

The currently selected gear is shown at the bottom of the Driver Information Center. The transmission will stay in this gear until you shift or the vehicle slows down significantly.

If engine speed is too high or low for the requested gear, the shift will not occur. If engine speed is too low for the current gear, the transmission will automatically downshift to avoid engine stalling.

When coming to a stop, the transmission will automatically shift to First gear.

See *Driving and Operating in your Owner Manual*.

### Tire Pressure Monitor

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by displaying the Tire Pressure Low message or the (!) Tire Pressure Very Low message on the Driver Information Center (DIC).

#### Correcting the Tire Pressure

When the low tire pressure warning light illuminates, you must inflate the tire to the proper tire pressure (just as you must refuel the vehicle when the low fuel warning light illuminates). The Tire and Loading Information label shows the correct tire pressure for the tires when they're cold. "Cold" means your vehicle has been sitting for at least three hours or driven no more than one mile.

You can temporarily clear the DIC message by acknowledging it with the DIC controls. However, a low tire pressure warning will remain on the DIC until you correct the tire pressure.

During cooler conditions, the low tire pressure warning message may appear when the vehicle is first started and then turn off as you start to drive. This could be an early indicator that your tire pressures are getting low and the tires need to be inflated to the proper pressure.

**Note:** The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance.


See *Vehicle Service and Care in your Owner Manual*.

### StabiliTrak® – Stability Control System

StabiliTrak is an advanced Electronic Stability Program® and traction control system that assists with directional control of the vehicle in difficult driving conditions by reducing engine power and applying the brakes to individual wheels. It turns on automatically every time the vehicle is started.

To limit wheelspin and help maintain directional control, the system should always be turned on. However, if your vehicle becomes stuck and rocking the vehicle is required, the system should be turned off.



- To turn off the StabiliTrak system, press the  (StabiliTrak) button located in front of the shift lever. Press it again to turn on the system.

See *Driving and Operating in your Owner Manual*.

## Spare Tire/Inflator Kit (if equipped)

G8 models are equipped with a compact spare tire located under the trunk floor.

G8 GT models are equipped with a tire inflator kit, which can be used to seal small punctures in the tread area of a tire. The kit is located under the trunk floor. Refer to the tire inflator kit instructions for complete operating information.

See *Vehicle Service and Care in your Owner Manual*.

## Battery Location

The vehicle battery is located behind an access panel on the driver's side of the trunk.


Jump start positive and negative posts are located under the hood on the driver's side of the vehicle.



See *Vehicle Service and Care in your Owner Manual*.

## Resetting the Oil Life System

The Oil Life System calculates engine oil life based on vehicle use and the Service Engine Oil message is displayed when it's necessary to change your oil and filter. The Oil Life System should be reset to 100% only following an oil change.

To reset the Oil Life System:

1. Press and hold the  (Trip) button on the steering wheel while turning on the ignition. Do not start the engine.
2. The instrument panel cluster will prompt to clear the service code.

3. Release the  button.
4. Press and hold the  (Enter) switch on the left side of the steering wheel for approximately one second.
5. Turn off the ignition.

See *Vehicle Service and Care in your Owner Manual*.

## Refueling the Vehicle

The fuel door is located on the passenger's side. **It will not open if the vehicle is locked.**

- To open the fuel door, press the center of the rear edge of the door and it will pop open slightly. Pull the door to open it fully.
- When closing the fuel door, press the center of the rear edge of the door until it latches and is flush with the side of the vehicle. It will not close if the vehicle is locked.

For maximum performance, premium fuel is recommended for vehicles equipped with the V8 engine.

See *Driving and Operating in your Owner Manual*.

## Winter Tires

Your vehicle features rear-wheel drive and may be equipped with "summer only" performance tires, which offer excellent handling on dry roads. However, during winter months, it's recommended to switch to winter tires that will provide additional traction in poor weather conditions. See your Pontiac dealer for information about recommended winter tires.

See *Vehicle Service and Care in your Owner Manual*.

**OWNER INFORMATION****Roadside Assistance**

**1-800-ROADSIDE**  
**(1-800-762-3743)**

TTY Users: 1-888-889-2438

As the proud owner of a new Pontiac, you are automatically enrolled in the Pontiac Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Pontiac's Roadside Assistance toll-free number is staffed by a team of technically trained advisors who are available 24 hours a day, 365 days a year, to provide minor repair information or make arrangements to tow your vehicle to the nearest Pontiac dealer.

Pontiac will provide the following services for 5 years/100,000 miles at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealer for warranty service
- Flat tire assistance
- Jump starts

In many instances, mechanical failures are covered under Pontiac's comprehensive warranty. However, when other services are utilized, our advisors will explain any payment obligations you might incur.

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

Pontiac reserves the right to limit services or reimbursement to an owner or driver when, in Pontiac's judgment, the claims become excessive in frequency or type of occurrence.

**Roadside Assistance and OnStar (if equipped)**

If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

**My GMLink**

The Pontiac Owner Center at My GMLink is a complimentary service for Pontiac owners, a one-stop resource to enhance your Pontiac ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at [www.mygmlink.com](http://www.mygmlink.com).

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. © 2007 GM Corp. All rights reserved.



92213382 A