

2017




Cadillac

ATS Convenience & Personalization Guide

cadillac.com

Review this guide for an overview of some important features in your Cadillac ATS. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More detailed information can be found in your Owner Manual.

INSTRUMENT PANEL

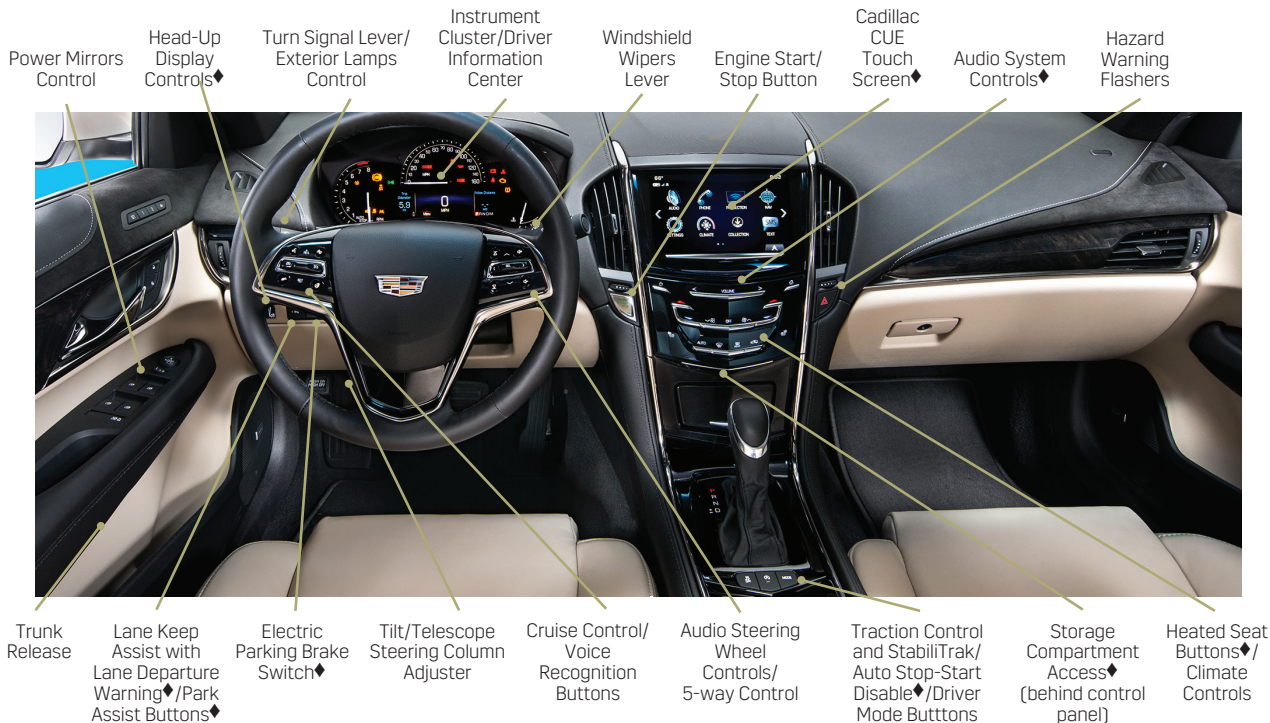

REMOTE KEYLESS ENTRY TRANSMITTER



Press to lock all doors.



Press to unlock the driver's door.
Press again to unlock all doors.
Press and hold to open all windows.

Note: To change the Remote Lock and Unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.



Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 17.



Press and release to locate your vehicle. The exterior lamps flash and the horn sounds.

Press and hold for 3 seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds, or until the button is pressed again or the vehicle is started.



Press twice to open the trunk.

See Keys, Doors and Windows in your Owner Manual.




KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and trunk without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or the trunk.**

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.

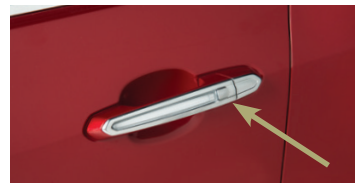

KEYLESS LOCKING

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

KEYLESS START

START

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** (and clutch pedal, if equipped) and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate. **ENGINE START/STOP** will illuminate on the button when the headlamps are on.



Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket at the front of the center console storage area to enable the engine to start.

Cell phone chargers may interfere with the operation of the Pushbutton Start System and should not be plugged in when starting or turning off the engine.

STOP/OFF

- ▶ Shift to Park (automatic transmission), or 1st or Reverse (manual transmission), and press the **ENGINE START/STOP** button to turn off the engine.

Power is available to operate the audio system for 10 minutes or until the driver's door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the vehicle in Accessory mode. The yellow indicator on the button will illuminate.

See Driving and Operating in your Owner Manual.

AUTO ENGINE STOP/START (IF EQUIPPED)

The Auto Engine Stop/Start system is included on 2.0L I4 turbo-charged engine and 3.6L V6 engine vehicles with an automatic transmission.


When the brakes are applied and the vehicle is at a complete stop, the engine may turn off, depending on operating conditions, to conserve fuel. When the engine stops, the tachometer displays AUTO STOP. When the brake pedal is released or the accelerator pedal is pushed, the engine will restart.

Auto Stop may automatically deactivate if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than D (Drive).
- The battery charge is low.
- The current settings for the climate control or defog system have not been reached.
- The Auto Stop time is greater than 2 minutes.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the  button on the center console when the engine is running to disable the Auto Engine Stop/Start system.

When the system is disabled, the button indicator will not be illuminated and the  symbol on the instrument cluster will change from green to white with a slash through it.

See Driving and Operating in your Owner Manual.

STEERING WHEEL CONTROLS

CRUISE CONTROL

 **On/Off**

SET Set Speed

With Cruise Control on, press the control bar down fully to set the cruise speed.



RES Resume Speed

With Cruise Control on, press the control bar up fully to resume the previous set speed.

+ – Adjust Speed

When active, press the control bar up (+) or down (–) lightly to increase or decrease the set speed by 1-mph increments; press up or down fully to increase or decrease the set speed to the next 5-mph interval on the speedometer.

 **Cancel**

Press to cancel cruise control without erasing the set speed from memory.

 **Following Gap**♦

Press repeatedly to select a gap setting of Far, Medium, or Near.

See Driving and Operating in your Owner Manual.

HEATED STEERING WHEEL♦

 **On/Off**

See Instruments and Controls in your Owner Manual.

VOICE RECOGNITION

 **Push to Talk**

Press to answer an incoming call or interact with the OnStar, Bluetooth or Cadillac CUE system.♦

 **End Call/Mute**

Press to end/decline a call or mute/unmute the audio system.

See Instruments and Controls in your Owner Manual.

5-WAY CONTROL

Moves left/right, up/down, and in.

 **Left/Right**

Press to navigate to the left or right cluster display. Press the left < to exit a center display menu.

 **Up/Down**


Press the control bar up or down to scroll through a menu.



SEL Select



Press to select a highlighted menu item.

AUDIO CONTROLS

 **Volume**

Press  or  to increase or decrease the volume.

 **Next/Previous**








Press  or  to select the next or previous favorite radio station or track.

See Instruments and Controls in your Owner Manual.

INSTRUMENT CLUSTER



Symbols

	StabiliTrak Off		Forward Collision Alert		Safety Belt Reminder
	Low Tire Pressure		StabiliTrak/Traction Control Engaged		Adaptive Forward Lighting Activated
	Service Electric Parking Brake		Engine Oil Pressure Warning		Electric Parking Brake Set
	Antilock Brake System Warning		Security Notification		Check Engine Warning
	Airbag Readiness		Lights On Reminder		Traction Control Off
	Brake System Warning		Charging System Warning		Cruise Control Activated
	High Beam Headlamps		Low Fuel Warning		Adaptive Cruise Control Activated
	Lane Keep Assist/ Lane Departure Warning		Engine Coolant Temperature		AutoStop

Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster.

See Instruments and Controls in your Owner Manual.

DRIVER INFORMATION CENTER



The Driver Information Center displays a variety of vehicle information on three display zones. Zones can be personalized to display: digital speedometer, trip odometer, fuel range, average fuel economy, compass, oil life, tire pressure, navigation, phone or other vehicle information.

Use the 5-way control on the right side of the steering wheel to navigate and select between the available menus. To select the desired display information:

1. Press the **< left** or **> right** side of the control bar to select one of the three display zones.
2. Press the control bar **^ up** or **v down** to scroll through a menu.
3. Press **SEL (Select)** to select a menu item. Press and hold to reset values on certain screens.
4. Press the **< left** or **> right** side of the control bar to retain the information view and to exit the display zone.

See Instruments and Controls in your Owner Manual.

HEAD-UP DISPLAY◆

The Head-Up Display (HUD) projects some operating information onto the windshield, reducing the need to look away from the road. The HUD controls are located on the left side of the instrument panel.



Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Lift up or press down to brighten or dim the display.

Hold down to turn off the display.

ROTATION OPTION

Adjust the angle of the HUD image to compensate for windshield variations.

- To adjust the angle of the HUD, use the 5-way control to view the Options menu on the instrument cluster and select HUD Rotation.

TOUCH SCREEN AND CONTROLS



Wi-Fi Indicator

Applications:
Touch the screen icon to access the application

VOLUME:
Touch arrows or swipe finger above chrome bar

Power/Mute:
Press and hold to turn Cadillac CUE On/Off; press to mute/unmute audio

Driver's Temperature Control

Climate Control Fan Speed

Driver's Heated Seat Control

AUTO:
Automatic Climate Control Operation

Defrost Mode

The controls use capacitive technology – simply touch the icon/text to access a feature or adjust a function.

Additional Pages:
Touch to view additional pages of applications

Interaction Selector:
Touch to display the favorites list

Home Page

Passenger's Temperature Control

Passenger's Heated Seat Control

Recirculation Mode

Rear Window Defog

Storage Compartment (with USB port and Wireless Charging):
Press and hold the bright bar to open/close

CADILLAC CUE MENUS

CUE offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access the following items.



Audio

- Radio Band
- Media
- Seek Up/Down
- Tune/Play
- Browse
- Menu




Navigation

- Zoom Out
- Zoom In
- Overview
- Destination
- Map Menu
- Seek Up/Down
- Mute/Unmute
- Cancel Destination



Phone

- Voice Recognition
 - Contacts
 - Recent
 - Keypad
 - Voice Mail
 - Phones
- Note: Press and hold the  **Push to Talk** steering wheel button to activate Voice Pass-Thru. See page 12.



Climate

- Driver/Vehicle Set Temperature
- Passenger Set Temperature
- Sync Temperature Settings
- A/C Mode
- Automatic Climate On/Off
- Air Delivery Settings
- Fan Speed



Settings

- Time and Date
- Rear Seat Reminder
- Language
- Valet Mode
- Teen Driver
- Radio
- Vehicle
- Bluetooth
- Apple CarPlay
- Android Auto
- Voice
- Display
- Rear Camera
- Return to Factory Settings
- Software Information

CADILLAC CUE FEATURES ♦

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

Cadillac CUE uses a Bluetooth or USB connection to link a compatible smartphone, cell phone, USB flash drive or portable audio player/iPod® to the touch screen infotainment display. It offers a variety of entertainment options and features enhanced hands-free voice control. For assistance, call 1-855-4-CUE-NOW (1-855-428-3669) or visit my.cadillac.com/learn.

INTERACTING WITH THE CADILLAC CUE SYSTEM

You can use simple gestures on the touch screen just as you would on a smartphone to interact with the Cadillac CUE system.

Tap



Touch and Hold



Drag




Spread



Pinch




SETTING THE TIME

1. Touch **Settings** on the Home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch + or – to adjust the hours, minutes, and AM or PM.
5. Touch  **Back** to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

PORTABLE AUDIO DEVICES

USB ports and an auxiliary audio input jack are located in the center console storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port.
- ▶ Touch **Audio**, and then touch  **Media** until the connected device is shown. Cadillac CUE will read the device and build a list of voice commands. Search for music on-screen or by voice commands.

CADILLAC CUE FEATURES

STORING FAVORITE STATIONS

Radio stations from all bands (AM, FM or SiriusXM), tone settings, phone contacts and navigation destinations can be stored in any order.

1. Display the desired radio station, tone settings, navigation destination or contact.
2. Touch and drag up the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button.
4. Repeat the steps to store another favorite item.

CADILLAC COLLECTION



In-vehicle apps — connecting to music, news, weather, travel information and more — are available for download to the radio through the Collection icon on the home page.

Downloading and using the apps requires Internet connectivity and a data plan accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.




TEXT MESSAGE ALERTS


Text message alerts play a text message over the audio system and allow a response with a preset message. The text messaging feature must be turned on in the Vehicle Settings menu. Messages can be viewed on the touch screen only when the vehicle is not moving. For more information, visit my.cadillac.com/learn.

- ▶ Touch the  Text icon to view the text message inbox.
- ▶ Touch the  speaker icon to listen to a message.

Visit my.cadillac.com/learn for more information.

APPLE CARPLAY™ AND ANDROID AUTO™

Apple CarPlay or Android Auto capability allows use of select smartphone apps through the infotainment display. If available, a  Projection icon will appear on the home page.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible smartphone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-CUE-NOW (1-855-428-3669) or visit my.cadillac.com/learn.

See your Cadillac CUE Infotainment System Manual.

CADILLAC CUE FEATURES

VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free, using the natural voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
 2. The radio will say “Say a command,” followed by a beep.
 3. After the beep, say what you want it to do.
- **Hands-free calling** – Example commands: “Call Amanda” or “Dial 555-1212”
 - **Connected music device search** – Example commands: “Play artist [name]” or “Play song [name]”
 - **Radio control** – Example commands: “Tune FM 104.3” or “Tune XM Classic Vinyl”
 - **Navigation control** – Example commands: “Destination Address” or “Destination Contact”
 - **Help** – Say “Help” for voice recognition assistance

VOICE PASS-THRU

Voice Pass-Thru allows access to the voice recognition commands on a compatible, paired cell phone; e.g. Siri or Voice Command. Visit my.cadillac.com/learn for more information.

- ▶ To activate Voice Pass-Thru, press and hold the **Push to Talk** steering wheel button.

See your Cadillac CUE Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner Manual for important safety information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.cadillac.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the **Push to Talk** button; after the tone, say “Pair Phone,” or
Use the touch screen to select Phone > Pair Device.
2. Start the pairing process on the phone. Locate Cadillac CUE on the phone.
3. Confirm the codes that appear on the touch screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See your Cadillac CUE Infotainment System Manual.

VALET MODE


- ▶ To lock/unlock various features of the vehicle, select Valet Mode under Settings and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

See your Cadillac CUE Infotainment System Manual.

VEHICLE PERSONALIZATION (INCLUDED WITH CADILLAC CUE◆)



Some vehicle features can be customized using the controls on the audio system. The Vehicle Settings menu may include Climate and Air Quality; Collision/Detection Systems; Comfort and Convenience; Lighting; Power Door Locks; and Remote Lock, Unlock, Start.

1. Touch **Settings** on the home page.
2. Touch **Vehicle Settings**.
3. Touch the desired menu item.
4. Touch the desired feature and setting.
5. Touch  **BACK** to exit each menu.

See Instruments and Controls in your Owner Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. A Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, a Driver Information Center message displays that Teen Driver is active.

- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Teen Driver.

See your Cadillac CUE Infotainment System Manual.

OVER-THE-AIR SOFTWARE UPDATES◆

The infotainment system can download and install vehicle software updates over a wireless Internet connection, which can be accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a secured Wi-Fi hotspot. The system will prompt high priority updates to be downloaded and installed.

- ▶ To check for updates manually, go to Settings > Software Information > System Update. Follow the on-screen prompts. Visit my.cadillac.com/learn for more information.

See Instruments and Controls in your Owner Manual.

WIRELESS CHARGING◆

The Wireless Charging system is located in the storage compartment behind the climate controls. To check mobile device compatibility, visit my.cadillac.com/learn.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the mobile device, face up, on the symbol on the charging pad.
4. Move the device slowly until the battery charging symbol displays on the Cadillac CUE screen, indicating the device is charging.

See Instruments and Controls in your Owner Manual.

ONSTAR WITH 4G LTE

With OnStar 4G LTE and Wi-Fi®, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance or to change the SSID and password, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827) to connect to an OnStar Advisor.

Note: See onstar.com for a detailed instruction guide, vehicle availability, details, and system limitations.

See your Cadillac CUE Infotainment System Manual.

MEMORY SEATS◆




SET MEMORY POSITIONS


With the ignition On or in Accessory mode:

1. Adjust the driver's seat, power outside mirrors and power steering column◆ to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound. Immediately press and hold button **1** until two beeps sound.

Repeat these steps using button **2** for a second driver.

To store driver's seat and power steering column◆ positions for more clearance when exiting the vehicle, repeat steps 1 and 2 using the  Exit button.

RECALL POSITIONS

- ▶ Press button **1**, **2** or  Exit. The button must be held down until the seat, mirrors and power steering column◆ reach the set position.

Note: To change the Auto Memory Recall settings, go to Comfort and Convenience in the Vehicle Settings menu.

See Seats and Restraints in your Owner Manual.

EXTERIOR LIGHTING



EXTERIOR LIGHTING

Rotate the band to operate the exterior lamps.

 **Off/On**

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system♦.

 **Parking Lamps**

 **Headlamps**

ADAPTIVE FORWARD LIGHTING (INCLUDED WITH HID HEADLAMPS)♦


The Adaptive Forward Lighting (AFL) system pivots the headlamps left or right in the direction of travel.

Note: The AFL system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

See Lighting in your Owner Manual.

♦ Optional equipment

WINDSHIELD WIPERS

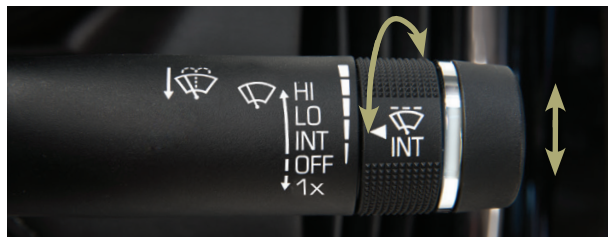

Move the lever to operate the windshield wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent (Rainsense™ Sensitivity)

If equipped with Rainsense automatic wipers♦, place the lever in the INT position and rotate the band to adjust the system sensitivity. The wipers activate more often as the band is rotated upward.

OFF

1x Single Wipe

Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

Note: When entering an automatic car wash, it is recommended to turn off the Rainsense windshield wipers♦. If Rainsense is active, the transmission is in Neutral and vehicle speed is very slow, the windshield wipers will stop at the base of the windshield to protect the wiper arms from potential damage.

See Instruments and Controls in your Owner Manual.


DRIVER ASSISTANCE SYSTEMS

The driver assistance systems use advanced technologies to help avoid collisions by providing visual, audible and/or tactile (vibration) alerts.

Safety Alert Seat – The driver's seat pulses, left side, right side, or simultaneously, to alert the driver of potential hazards.

- ▶ Audible alerts may be selected instead of Safety Alert Seat pulsing alerts. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.


Forward Collision Alert – The  Vehicle Ahead indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses.



- ▶ To set the alert timing, press the  **Following Gap** button on the left side of the steering wheel. The setting is displayed on the Driver Information Center (A).


Following Distance Indicator – The following time to the vehicle ahead is indicated in seconds on the Driver Information Center (B). If no vehicle is detected ahead, dashes are displayed.




Adaptive Cruise Control – If a vehicle is detected ahead, the vehicle accelerates or brakes moderately to maintain the driver-selected cruise speed and following gap.

- ▶ To set a following gap, press the  **Following Gap** button on the left side of the steering wheel.

Lane Keep Assist with Lane Departure Warning – May help avoid crashes due to unintentional lane departures. The  is green if the system is available to assist. It may assist by gently turning the steering wheel and display an amber  if the vehicle approaches a detected lane marking without using a turn signal in that direction. If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse three times on the side of the departure direction as the lane marking is crossed.

- ▶ To turn the systems on or off, press the  **Lane Keep Assist** button on the left side of the instrument panel.

Front and Rear Automatic Braking – Automatically applies the brakes in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead or behind, and with some objects behind.

- ▶ To change the setting to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.
- ▶ To turn the Rear Automatic Braking system on or off, press the  **Park Assist** button on the left side of the instrument panel. This will also turn on/off the Park Assist and Rear Cross Traffic Alert systems.

Side Blind Zone Alert with Lane Change Alert – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

DRIVER ASSISTANCE SYSTEMS

Rear Cross Traffic Alert – With the vehicle in Reverse, a warning of approaching cross traffic is displayed on the touch screen from the Rear Vision Camera, and the left or right side of the Safety Alert Seat pulses to indicate the direction of the cross traffic.

- ▶ To turn the system on or off, press the **P** **Park Assist** button on the left side of the instrument panel. This will also turn on/off the Park Assist and Rear Automatic Braking systems.

Automatic Safety Belt Tightening – While driving, the front safety belts automatically tighten during initial acceleration and emergency braking or steering maneuvers, and release when driving conditions return to normal.

See Driving and Operating in your Owner Manual.

AUTO HEATED SEATS

When the vehicle is on, the auto heated seats will be activated at the level required by the vehicle's interior temperature. The heated seat level is shown on the heated seat control indicators. Turn off the heated seats using the heated seat controls.

- ▶ To turn the auto heated seats feature on or off, go to Settings > Vehicle > Climate and Air Quality > Auto Heated Seats.

See Driving and Operating in your Owner Manual.

ADAPTIVE REMOTE START

STARTING THE VEHICLE

1. Press and release the **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the **Remote Start** button until the turn signal lamps flash.

When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.

3. Before driving, simultaneously press the brake pedal and the **ENGINE START/STOP** button to activate vehicle systems.

CANCELING A REMOTE START

- ▶ Press and hold the **Remote Start** button until the parking lamps turn off.

CLIMATE CONTROL OPERATION

During a remote start, the automatic climate control system will operate at the same setting as when the vehicle was last turned off.

HEATED SEAT OPERATION

If the remote start heated seat option is selected in the Vehicle Settings, the heated seat button indicators do not illuminate and the temperature performance of the unoccupied heated seat may be reduced during the remote start. The heated seat turns off when the ignition is turned on.

See Keys, Doors and Windows in your Owner Manual.

AUTOMATIC TRANSMISSION TAP SHIFT



The 8-speed automatic transmission has an available Tap Shift mode that allows you to shift gears similar to a manual transmission.

USING TAP SHIFT

1. While in Drive (D), use either paddle behind the steering wheel to temporarily take control of gear selection.

2. Pull the right paddle to upshift or the left paddle to downshift. If current vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will automatically shift to 1st gear.

The automatic transmission also can be manually controlled by moving the shift lever to the left gate; tap the lever forward to upshift and rearward to downshift.


 

See Driving and Operating in your Owner Manual.

STABILITRAK®/TRACTION CONTROL SYSTEMS

The traction control system limits wheelspin and the StabiliTrak system assists with the stability of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.



Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak** button on the center console. The  Traction Control Off light on the instrument cluster will illuminate.
- ▶ Press the  button again to turn on traction control.

See Driving and Operating in your Owner Manual.

DRIVER MODE CONTROL SYSTEM

The Driver Mode Control System automatically adjusts steering, automatic transmission (if equipped) and Magnetic Ride Control (if equipped) settings in real time.

- ▶ Press the **MODE** button on the center console to select Tour (default at each ignition cycle), Sport, or Snow/Ice mode.

See Driving and Operating in your Owner Manual.

SUNROOF◆



EXPRESS OPEN/CLOSE THE SUNROOF

- ▶ Fully press the SLIDE switch to express open the sunroof. Press the switch again while the sunroof is in motion to stop the sunroof at that position.
- ▶ Fully press the SLIDE switch to express close the sunroof. Press the switch again while the sunroof is in motion to stop the sunroof at that position.

TILT/CLOSE THE SUNROOF

- ▶ Press the TILT switch to tilt the sunroof.
- ▶ Press the TILT switch to close the sunroof.

See Keys, Doors and Windows in your Owner Manual.

TIRES

TIRE PRESSURE MONITOR

The Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

TIRE SEALANT AND COMPRESSOR KIT◆

The tire sealant and compressor kit can be used to temporarily seal small punctures in the tread area of the tire. The kit is located under the trunk floor. Refer to the kit instructions for complete operating information.

See Vehicle Care in your Owner Manual.

ELECTRIC PARKING BRAKE◆

- ▶ To apply the parking brake, pull the Parking Brake switch on the left side of the instrument panel (automatic transmission) or on the center console (manual transmission).
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the switch.



See Driving and Operating in your Owner Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CUSTOMER ASSISTANCE

1-800-458-8006

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

CADILLAC ONLINE OWNER CENTER

Create an account at my.cadillac.com for access to an online Owner Manual, helpful how-to videos, your service history and warranty status, OnStar reports (active OnStar account required), and more.

myCADILLAC and ONSTAR MOBILE APPS

The myCadillac mobile app connects owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance.

Download the OnStar RemoteLink mobile app and enjoy select features for 5 years from date of vehicle delivery. With a compatible mobile device, owners can access many services, including remotely starting/stopping the vehicle, locking/unlocking the doors, and locating the vehicle on a map (on properly equipped vehicles). To learn more about OnStar services, press the blue OnStar button, call 1-888-466-7827, visit onstar.com or refer to your Owner Manual.

Download the mobile apps from your compatible mobile device's app store.

CADILLAC CUE SUPPORT

1-885-4-CUE-NOW
(1-855-428-3669)

For information or assistance operating the Cadillac CUE infotainment system, call Cadillac CUE Support or visit my.cadillac.com/learn.



We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2016 by General Motors. All rights reserved.

